


# CN45RA Explosive View and Parts list

Issue date:2017.04.27  
Version no.:

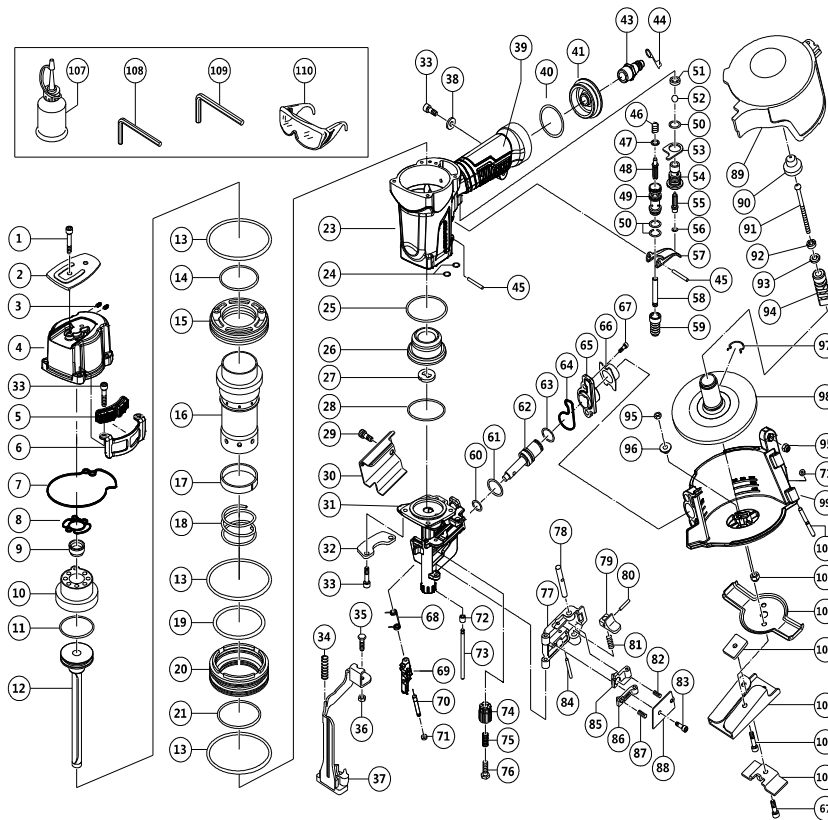

No.	Figure number	Description	Qty.	No.	Figure number	Description	Qty.	No.	Figure number	Description	Qty.
1	03.01.05.407	Hex. Socket HD. Bolt M5x30	2	39	03.04.29.093	Grip Rubber	1	77	03.01.13.184	Nail Guide	1
2	03.04.21.058	Exhaust Cover	1	40	03.04.01.141	O-ring (36.3x3.55)	1	78	03.04.31.137	Lock Shaft	1
3	03.04.05.073	Bolt M5X8	2	41	03.04.11.043	Cap	1	79	03.04.10.065	Guide Lock	1
4	02.31.03.151	Cylinder cap	1	43		Air inlet plug	1	80	03.04.05.189	Roll Pin D3x10	1
5	03.04.17.143	Protector	2	44		Air inlet plug case	1	81	03.04.36.297	Spring	1
6	03.04.16.143	Body Guard	2	45	03.04.05.197	Roll pin 3x30	2	82	03.04.36.298	Main Stopper Spring	1
7	03.04.19.213	Gasket	1	46	03.04.34.088	Plunger Spring	1	83	03.04.05.010	Hex. Socket HD.Bolt M4x10	2
8	03.04.19.214	Gasket	1	47	03.04.01.103	Plunger O-ring 3x1.8	1	84	03.04.05.349	Roll Pin D3x28	1
9	03.04.40.113	Seal plug	1	48	03.04.15.110	Plunger	1	85	03.04.17.145	Main Nail Stopper	1
10	03.04.39.08.014	Exhaust Valve	1	49	03.04.32.115	Valve Bushing	1	86	03.04.17.146	Nail Stopper	1
11	03.04.01.033	O-ring (30.5x3.5)	1	50	03.05.01.358	O-ring (11.8x1.5)	3	87	03.04.36.299	Sub Stopper Spring	1
12	03.04.39.01.224	Piston(H)	1	51	03.04.19.059	Valve Packing	1	88	03.04.02.156	Nail Guide Cover	1
13	03.04.01.086	O-ring (65x2)	3	52	03.04.40.112	Urethane Ball (c) D7.14	1	89	03.04.40.414	Magazine Cover	1
14	03.04.01.085	O-ring (41.5x2.4)	1	53	03.04.25.146	Valve Plate	1	90	03.04.04.171	Holder Cap	1
15	03.04.19.215	Cylinder O-ring	1	54	03.04.32.116	Trigger Valve Bushing	1	91	03.04.05.124	Machine screw M4x50	1
16	03.04.27.072	Cylinder	1	55	03.04.15.111	Trigger Plunger	1	92	03.04.05.262-03	Spring Washer D4	1
17	03.04.19.217	Cylinder Ring	1	56	03.04.01.111	O-ring(2.8x1.8)	1	93	03.04.05.252-02	Washer D4	1
18	03.04.34.087	Cylinder Spring	1	57	03.04.03.018-02	Trigger	1	94	03.04.15.113	Holder Shaft	1
19	03.04.01.094	O-ring (56x2.4)	1	58	03.04.15.112	Pushing Lever	1	95	03.04.05.707	Nut M5	2
20	03.04.19.216	Cylinder O-ring(B)	1	59	03.04.29.144	Bumper Sheet	1	96	03.04.29.221	Sleeve	2
21	03.04.01.095	O-ring (47x2.4)	1	60	03.04.01.064	O-ring (8.75x1.8)	1	97	03.04.34.089	Ratchet Spring	1
22	03.04.26.002	Body Ass'y	1	61	03.05.01.068	Feed Piston O-ring (14.2x1.9)	1	98	03.04.40.415	Nail Holder	1
23	03.04.01.113	O-ring 5.3x1.22	2	62	03.04.40.413	Feed Piston	1	99	03.04.40.416	Magazine	1
24	03.04.01.096	O-ring (43.5x2.65)	1	63	03.04.01.059	O-ring (11.2x1.8)	1	100	03.04.31.138	Pin	1
25	03.04.06.092	Piston Bumper	1	64	03.04.19.220	Gasket	1	101	03.04.05.716	Nut M4	1
26	03.04.19.218	Sealing washer	1	65	03.04.04.170	Feed Piston Cover	1	102	03.04.02.157	Magazine Guard	1
27	03.04.01.155	O-ring 41x1.6	1	66	03.04.29.164	Magazine Bushing	1	103	03.04.17.147	Plate Nut	1
28	03.04.05.026	Hex.Socket HD.Bolt M5x8	2	67	03.04.05.027	Hex. Socket HD.Bolt M5x10	3	104	03.04.32.164	Guide Base	1
29	03.04.02.155	Guard	1	68	03.04.24.032	Feeder Spring	1	105	03.04.05.029	Hex.Socket HD.Bolt M5x14	2
30	03.04.08.199	Nose	1	69	03.04.33.018	Feeder	1	106	03.04.17.148	Shingle Guide	1
31	03.04.17.144	Nose Guard	2	70	03.04.31.135	Feeder Shaft	1	107	05.04.24.035	OILER	1
32	03.04.05.034	Hex.Socket HD.Bolt M5x25	9	71	03.04.29.222	Feeder Shaft Ring	2	108	05.04.21.003	WRENCH M4	1
33	03.04.36.295	Spring	1	72	03.04.29.223	Shaft Ring	1	109	05.04.21.002	WRENCH M5	1
34	03.04.05.372	Safety Bolt M5X16	1	73	03.04.31.136	Nail Guide Shaft	1	110	05.04.22.003	SAFETY GLASSES	1
35	03.04.05.707	Nut M5	1	74	03.04.29.180	Adjuster	1	111			
36	03.04.39.04.058	Safety yoke	1	75	03.04.36.296	Adjuster Spring	1	112			
37	03.04.05.255	Washer	1	76	03.05.07.087	Bolt	1	113			

Note: If you need spare parts of this model, pls feel free to contact us or the distributor where you bought this tool. Tks!